

The most important user functions of the control panel

1 Switching the air curtain on and off

Press **1** to switch the air curtain on, it is now on Manual. Press once more **1** and the air curtain operates on AUTO. Switch off the air curtain by pressing the **1** again.

- The air curtain is running in manual mode: MANUAL LED is on.
- The air curtain is running in automatic mode: AUTO LED is on.
- The air curtain is not running - all LEDs are off.

2 Manual or AUTO

a) MANUAL

In manual mode, heating can be set to 0% (Blue LED), 50 % or 100% capacity.

- Press **2** or **3** to set the heating higher or lower
- Press **2** until blue LED **7** illuminates
- The heating is now turned off (*)

b) AUTO

In automatic mode, the unit measures the air inlet temperature and automatically selects the required heating setting to adjust the air temperature to the configured level. In this way the room is not unnecessarily heated.

(*) Recommended strength during summer months.

3 Adjust the strength of the air curtain

The air curtain can be set in three different strengths: low **4**, medium **5** and high **6**. The selected strength depends on the situation (outside temperature and wind attack on the door). Biddle recommends to select the lowest strength at which no draughts occur.



This card provides concise information only. For more detailed information we refer to the manual of the Comfort Air Curtain, model DoorFlow.

Name and telephone number installer: